

# KARMA

USER MANUAL

## JOIN THE GOPRO MOVEMENT

---



[facebook.com/GoPro](https://facebook.com/GoPro)



[youtube.com/GoPro](https://youtube.com/GoPro)



[twitter.com/GoPro](https://twitter.com/GoPro)



[instagram.com/GoPro](https://instagram.com/GoPro)


## TABLE OF CONTENTS


---

Getting Started	4
Flying Safely	14
Pre-Flight Checklist	16
Taking Off	17
Capturing Video and Photos	18
Sharing Your Live Flight	21
Landing Karma	22
Offloading Content	25
Pairing and Calibration	26
Battery	27
Troubleshooting	29
GoPro Care	31
Trademarks	31
Regulatory Information	31

## GETTING STARTED

### DRONE + STABILIZER + BATTERY

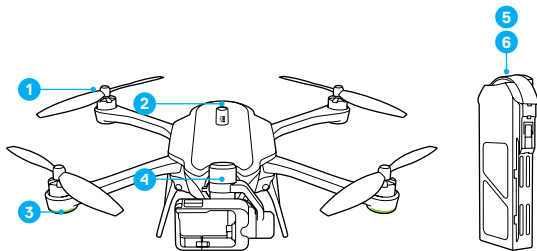


1. Propellers
2. Power Button [  ]
3. Orientation Lights
4. Camera Stabilizer

5. Battery Status Lights
6. Battery Status Button
7. Touch Display
8. Camera Tilt Wheel

## GETTING STARTED

### CONTROLLER

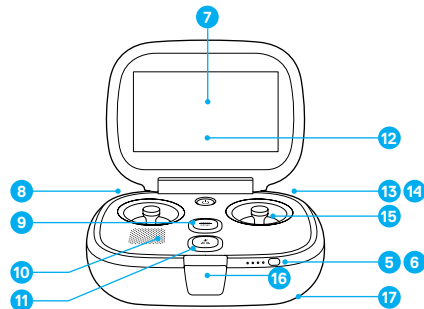

9. Start/Stop Button
10. Speaker
11. Land Button [  ]
12. Ambient Light Sensor
13. Shutter Button [  ]


14. Mode/Tag Button
15. Joysticks
16. Charging Port
17. Lanyard Tether Point

## GETTING STARTED


---

### CHARGING THE KARMA BATTERY AND CONTROLLER

1. Remove the battery from Karma.

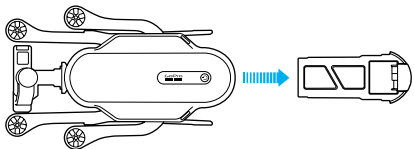

2. Connect the components to the charger.

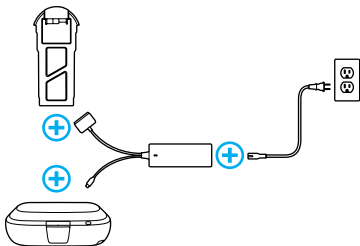

3. Connect the charger to a wall outlet. The battery status lights on the battery and the controller indicate the charge level.

## GETTING STARTED


---

**NOTICE:** Using a battery charger other than the Karma charger can damage the Karma battery. For the controller, use only chargers marked: Output 0.5V 0.5-3A. If you do not know the voltage and current of your charger, use the Karma charger.

For more battery information, see [Battery](#) (page 27).

### CHECKING THE BATTERY LEVEL

Press the **Battery Status** button.

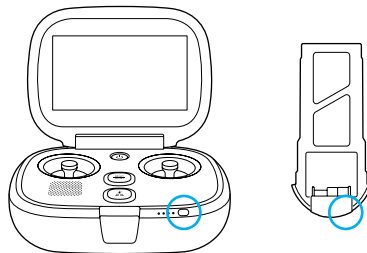

As the controller's battery is used, one battery status light blinks, then turns off. This pattern continues until all lights are off, indicating that the battery is fully drained.


When Karma is in flight, the battery status is indicated at the top of the touch display. However, Karma returns to the launch location if the battery becomes too low. For more information, see [Automatic Safety Landings](#) (page 23).

## GETTING STARTED

---


### ASSEMBLING KARMA

1. Insert the battery.

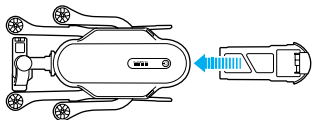

2. Unfold the landing gear and arms.

*Note: To close the landing gear, pull the legs toward the back of the drone, then bend them inward.*

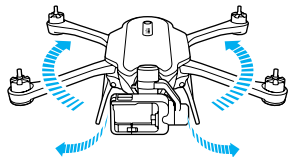


## GETTING STARTED


---

3. Open the harness and insert a camera (sold separately, for some Karma bundles).

*Note: Although the Karma battery powers both the drone and the camera, the camera must contain a battery so that Karma is properly balanced.*

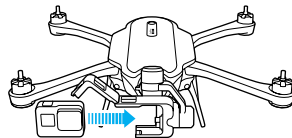

4. Securely tighten the propellers. Propellers are color-coded to match the correct motors.

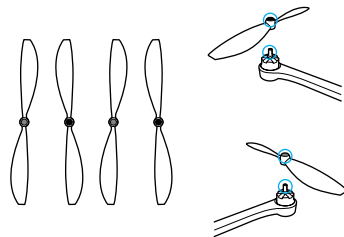


**PRO TIP:** Replacement parts for Karma or its components are available at [gopro.com](http://gopro.com).


## GETTING STARTED

 ---

### SETTING UP KARMA

The Karma controller contains everything you need to set up Karma and control the drone during flight. In addition to flight data and safety info, the controller contains an interactive flight simulator so you can practice before Karma leaves the ground.

1. Power on the controller, then power on the drone. The light around the **Power** button [  ] turns on. The orientation lights on the arms help you identify the front and back of the drone during flight. The lights on the front are green and those on the back are red.

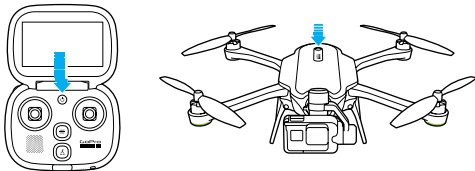



2. Follow the on-screen instructions to set up your system and learn how to fly.

**PRO TIP:** You can practice flying at any time with the flight simulator on the controller. From the Home screen, tap Learn, then tap Practice Flying.

## GETTING STARTED

---



### LEFT JOYSTICK

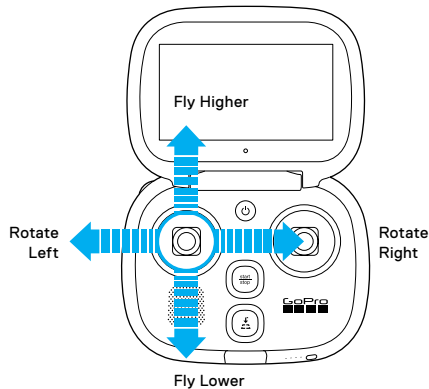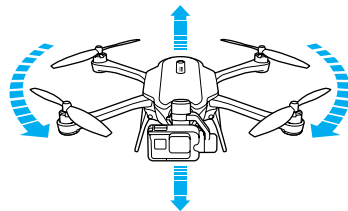

## GETTING STARTED

---


### RIGHT JOYSTICK

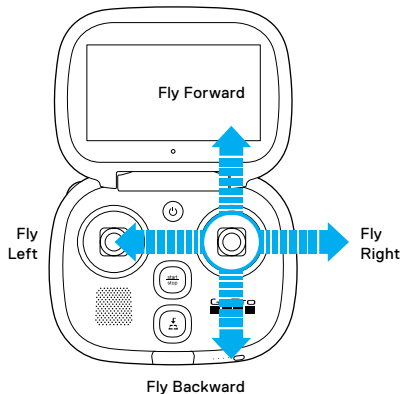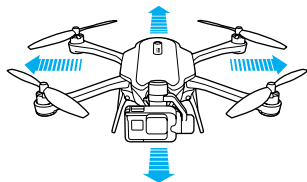

## GETTING STARTED

---

### KARMA AND YOUR GOPRO

The controller operates both Karma and your camera, so the camera buttons are disabled when you use your camera with the drone. In addition, the camera's wireless connection is turned off, the camera uses Karma's battery, and a drone icon [  ] appears on the camera status screen.

### SOFTWARE UPGRADES

To get the latest features and best performance from your Karma components, make sure to periodically check for updates by connecting the controller to a Wi-Fi network (from the Home screen, tap Connect > Wi-Fi). The controller then automatically notifies you if a software upgrade is available and provides instructions about how to download and install it.



**WARNING:** Abide by all local laws when using Karma and its accessories. Depending on where you plan to operate Karma, there may be restrictions on use in certain areas, such as populated public sporting events, near airports, or in connection with certain activities, such as hunting. It is solely your responsibility to comply with all local laws, regulations and restrictions.


## FLYING SAFELY



Don't fly over people or animals.




Don't fly in fog, high winds, rain or snow.

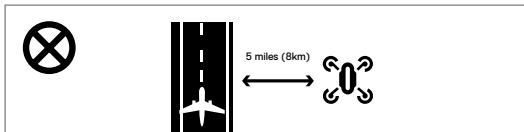


Don't fly within 5 miles (8km) of airports.

## FLYING SAFELY

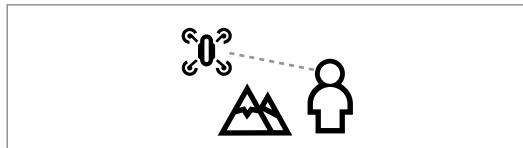

Fly outdoors and within line of sight.\*

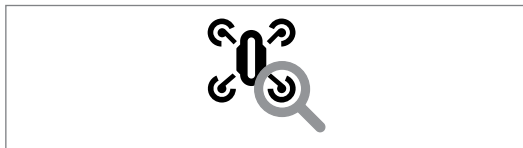

Make sure your Karma isn't damaged.



Comply with all regulations.

\*Flight restrictions vary by location.



## PRE-FLIGHT CHECKLIST

---

Complete these items before every flight:

- Securely tighten the propellers
- Fully extend the landing gear and arms
- Be sure the camera stabilizer is securely locked into the drone
- Check battery levels for Karma, the controller, and the camera
- Check the available space on the microSD card
- Be sure your flight area is clear of people and obstacles
- Review all safety items in [Flying Safely \(page 14\)](#)

## TAKING OFF

---

Before taking off, be sure to complete the items in [Pre-Flight Checklist \(page 16\)](#).

1. Place Karma on flat, firm ground in an open area. Point the camera away from you.
2. Power on Karma and the controller. Karma takes a few minutes to warm up. During this time, the stabilizer might move around. Do not move Karma until the light around the **Start/Stop** button turns solid green.
3. When the controller confirms that Karma is ready for flight, press and hold the **Start/Stop** button on the controller for 3 seconds to start the motors.  
*Note: The Karma controller contains antennae that must be directed at Karma at all times. If the connection is lost, Karma returns to the launch location. For details, see [Automatic Safety Landings \(page 17\)](#).*
4. Select one of these options:
  - To take off automatically, tap the auto takeoff button on the touch display.
  - To take off manually, gently push the left joystick forward.
5. Use the joysticks to guide the drone during flight.

---

**PRO TIP:** As long as Karma has a GPS connection exists, the drone hovers in place whenever you let go of the joysticks.

---



**WARNING:** Never touch Karma while it is in flight. Do not touch the propellers while they are spinning. The propellers have sharp edges and move rapidly with force.


---

## CAPTURING VIDEOS AND PHOTOS


---

### CAPTURING VIDEO AND PHOTOS

1. On the controller, press the **Mode/Tag** button to cycle to the mode that you want. For more information about camera modes and settings, see the user manual for your camera at [gopro.com/help](https://gopro.com/help).

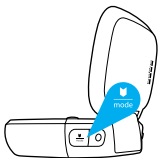


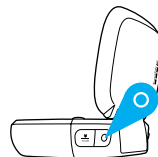
2. Roll the **Camera Tilt** wheel on the controller to adjust the camera angle.

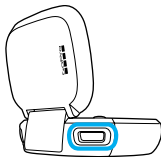

## CAPTURING VIDEOS AND PHOTOS

---

3. Press the **Shutter** button [  ]. The camera status at the bottom of the touch display indicates when recording starts.




4. To stop capturing video or time lapse content, press the **Shutter** button again. The camera status at the bottom of the touch display indicates when recording stops.

---

**PRO TIP:** For best results, make small adjustments when tilting the camera and fly slowly.

## CAPTURING VIDEO AND PHOTOS

---

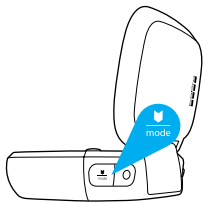

### HIGHLIGHT TAGGING

You can mark specific moments in your video as they happen with HiLight Tags. HiLight Tags make it easy to find the best moments to share.

#### To Add HiLight Tags During Recording:

On the controller, press the **Mode/Tag** button.

## SHARING YOUR LIVE FLIGHT

---

If you are flying Karma with friends, they can watch your live flight on their iOS® or Android™ mobile devices with the GoPro Passenger App.

1. From the Home screen of the controller, tap Connect, and then tap Passenger. This screen displays the name and password of your drone.
2. Tap the button to turn on Passenger.
3. Ask your friend to complete these steps:
  - a. Download the GoPro Passenger App from the Apple® App Store® or Google™ Play to a smartphone/tablet.
  - b. Open the app and follow the on-screen instructions to connect to the controller.
4. When the Passenger app is connected, tap one of these options:
  - To let your friend view your live flight, tap Viewer.
  - To let your friend view your live flight and control the camera stabilizer while you fly, tap Co-Pilot.


*Note: The GoPro Passenger App cannot control the drone's flight.*

## LANDING KARMA

---


### AUTOMATICALLY LANDING KARMA

With an automatic landing, you have the option of Karma returning to the launch location, returning to you, or landing in place. You can use the joysticks to maneuver Karma around obstacles during the return flight and descent.

1. Press the **Land** button [  ] on the controller.
2. Select where you want Karma to land:
  - The launch location
  - Your current location
  - In place (straight down)

Unless you opt to land in place, Karma hovers for a few seconds, moves to an altitude of 66ft (20m), then flies to the landing location.

*Note: You can set the altitude for automatic landings in the Flight Settings on the controller.*

3. Use the joysticks to maneuver around obstacles during the return flight. When Karma reaches the launch location, it hovers for 10 seconds before starting the descent.
4. When the propellers stop spinning, press and hold the **Power** button [  ] on Karma. The button light and the orientation lights on the arms turn off when Karma is powered off.

### CANCELLING AN AUTOMATIC LANDING

 
To cancel an automatic landing and regain full control of Karma, tap Cancel on the touch display.

## LANDING KARMA

---

### MANUALLY LANDING KARMA

With a manual landing, you use the joysticks to control Karma during the return flight and guide it to the ground.

1. Use the joysticks to guide Karma toward a safe landing area.
2. When you reach the landing area, gently pull the left joystick back until Karma reaches the ground, then continue pulling this joystick back until the propellers stop spinning.
3. Press and hold the **Power** button [  ] on Karma. The button light turns off when Karma is powered off.

*Note: In an emergency, you can stop the motors immediately by pressing and holding the **Start/Stop** button and **Land** button simultaneously for 5 seconds.*

### AUTOMATIC SAFETY LANDINGS

To prevent damage to the drone and its surroundings, Karma includes these built-in safety landings:

#### Low Battery Landings

If the Karma battery level becomes low during flight, Karma automatically returns to the launch location. It is possible (although not advised) to cancel this automatic flight and continue flying. If the Karma battery then reaches a critical level, the controller notifies you and Karma begins landing in place.

#### Lost Connection Landing

If the controller loses connection to Karma, Karma hovers in place while the controller tries to re-establish a connection. If a connection cannot be re-established, Karma returns to the launch location.

Karma automatically returns to the controller's last known location, if the controller moved more than 82ft (25m) from the launch location.

*Note: During any automatic safety landing, you can use the joysticks to maneuver Karma around obstacles only if a connection exists between the controller and the drone.*

## LANDING KARMA

---

### Critical Landing

If Karma encounters an emergency (such as a software problem), the controller notifies you, and Karma immediately lands in place.

Unless the connection between Karma and the controller is lost, you can still use the joysticks during these safety landings to maneuver around obstacles.

## OFFLOADING CONTENT

---

Your videos and photos are saved to the camera's microSD card. Transfer the content to a computer or mobile device to view, edit, and share your aerial footage.

### OFFLOADING CONTENT TO A MOBILE DEVICE

1. Download and install Capture from the Apple® App Store® or Google™ Play to your smartphone/tablet.
2. Follow the on-screen instructions to connect your camera.

### OFFLOADING CONTENT TO A COMPUTER

1. Download and install the Quik™ app for desktop from [gopro.com/apps](https://gopro.com/apps).
2. Connect the camera to your computer using the USB cable that came with your camera.
3. Power on the camera and follow the on-screen instructions in Quik.



You can also transfer files to a computer using a card reader (sold separately). Connect the card reader to your computer and insert the microSD card into the reader. You can then transfer your files to your computer or delete selected files on your card.

## PAIRING AND CALIBRATION

---

### PAIRING THE KARMA DRONE AND THE KARMA CONTROLLER

If you replace the Karma Drone and/or the Karma Controller, you must manually pair the two components.

1. Press the **Power** button [  ] on the controller.
2. Press the **Power** button [  ] on Karma until the orientation lights on the arms blink front to back.
3. From the Home menu, tap Connect, then tap Pairing.
4. Follow the on-screen instructions.

### CALIBRATION

Accelerometer and compass calibration might be required at times to ensure the best flight performance from Karma.

The compass and accelerometer on both the drone and the controller are calibrated automatically. However, if either of these components must be recalibrated, the controller notifies you and provides step-by-step instructions to guide you through the process.

## BATTERY

---

### BATTERY USE AND SAFETY

Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate, or paint your Karma battery or Karma controller. Do not insert foreign objects into the battery bay on your Karma. Do not use your Karma or any GoPro product containing a battery if the product has been damaged—for example, if cracked, punctured, or in contact with liquids.



**WARNING: Handle and store batteries properly to avoid injury or damage. Most battery issues arise from improper handling of batteries and, particularly, from the continued use of damaged batteries.**

Battery fluid can cause serious burns to the skin and eyes. In the unlikely event that battery fluid leaks onto your skin, wash the affected area with plenty of water and seek medical advice immediately.

Do not expose your Karma or battery to excessive heat, including direct sunlight or fire and storage or use inside cars in hot weather, where it can be exposed to temperatures in excess of 140° (60°). Doing so may cause the battery to generate heat, rupture, or ignite. Using your Karma battery in this manner also may result in loss of performance and a shortened life expectancy.

If the battery is damaged and ignites, do not use water to extinguish flames. Instead, use a functioning fire extinguisher. Do not short-circuit batteries. Avoid storing them around metal objects such as keys, pocket change, paper clips, and jewelry.

The battery charger must be used indoors only. It is neither designed nor tested for outdoors, in recreation vehicles, or on boats. Make no modifications to the battery charger. Unauthorized alterations may compromise safety, regulatory compliance, and battery charger performance, and may void the warranty. Do not drop the battery charger or batteries.

## BATTERY

---

The battery is intended only for use with the battery charger provided with your Karma. Do not continue charging the battery if it does not reach full charge within two hours. Overcharging may cause the battery to become hot, rupture, or ignite. If you see any heat deformation or leakage, properly dispose of the battery.

Do not charge or connect a battery if the power cable has been pinched or shorted. Always inspect the battery and charger before charging. Do not pierce, crush, dent, or deform the battery or charger in any way. If either becomes deformed, properly dispose of it.

Do not dry your Karma which contains batteries with an external heat source such as a conventional or microwave oven or hair dryer.

Do not attempt to use the Karma battery to power other electronics. Doing so may result in permanent damage to your product and/or personal injury.

### BATTERY DISPOSAL

Most rechargeable lithium-polymer batteries are classified as non-hazardous waste and are safe for disposal in the normal municipal waste stream. Many localities have laws in place requiring battery recycling. Check your local laws to make sure that you can dispose of rechargeable batteries in your regular trash.

To safely dispose of lithium-polymer batteries, protect terminals from exposure to other metal with packing, masking, or electrical tape so they do not cause a fire while being transported. Lithium-polymer batteries, however, do contain recyclable materials and are accepted for recycling by the Rechargeable Battery Recycling Corporation's (RBRC) Battery Recycling Program. We encourage you to visit Call2Recycle at [call2recycle.org](http://call2recycle.org) or call 1-800-BATTERY in North America to find a convenient recycling location. Never dispose of a battery in a fire because it may explode.

## TROUBLESHOOTING

---

### ONE OF MY KARMA PARTS BROKE


You have several options to replace the part:

- If the warranty period has not expired, contact Customer Support for a replacement part.
- If you purchased GoPro Care, most replacement parts are included in the plan (camera replacements are available for a fee). For more info, visit [shop.gopro.com/care](http://shop.gopro.com/care).
- If the warranty period already expired and you did not purchase GoPro Care, visit [gopro.com](http://gopro.com) to purchase a replacement.


### KARMA OR THE CONTROLLER WON'T POWER ON

Make sure the component is charged. For details, see [Charging the Karma Battery and the Controller](#) (page 6).

### KARMA WON'T RESPOND TO THE CONTROLLER

Remove and re-insert the battery, then press the **Power** button [  ] on the drone to turn it on.

### THE CONTROLLER WON'T RESPOND WHEN I PRESS A BUTTON

Press and hold the **Power** [  ] button on the controller for 8 seconds to restart it.

### THE START/STOP BUTTON ON THE CONTROLLER IS RED

- Quickly blinking: A system error occurred that requires Customer Support to resolve.
- Slowly blinking: The connection between Karma and the controller is lost. If a lost connection occurs during flight, Karma attempts to return to the launch location and land. If a connection is re-established during the return flight, this light turns solid green. At this point, you can tap Cancel on the touch display to cancel the return flight and regain control of the drone.

## TROUBLESHOOTING

---

### THE POWER BUTTON ON KARMA IS YELLOW

Calibration is required. Whenever calibration is needed, the controller also notifies you and provides step-by-step instructions.

### KARMA WON'T PAIR WITH THE CONTROLLER

Karma Drone and the Karma Controller are paired out of the box.

But if you need to re-pair them, follow these guidelines:

- Move the controller at least 6ft (2m) away from the drone.
- Be sure to correctly follow the pairing instructions on the controller.

For more information about Karma, see [gopro.com/yourkarma](http://gopro.com/yourkarma).

## GOPRO CARE

---

GoPro Care (optional) provides unprecedented damage support and replacement parts so you can fly worry free. For more info, visit [shop.gopro.com/care](http://shop.gopro.com/care).

## TRADEMARKS

---

Actual product specifications may vary, and all features, functionality and other product specifications are subject to change without notice or obligation. GoPro, HERO and their respective logos are trademarks or registered trademarks of GoPro, Inc. in the United States and other countries. All other trademarks are the property of their respective owners. © 2016 GoPro, Inc. All rights reserved.

## REGULATORY INFORMATION

---

To see the complete list of country certifications, refer to the Important Product + Safety Instructions included with Karma.





